

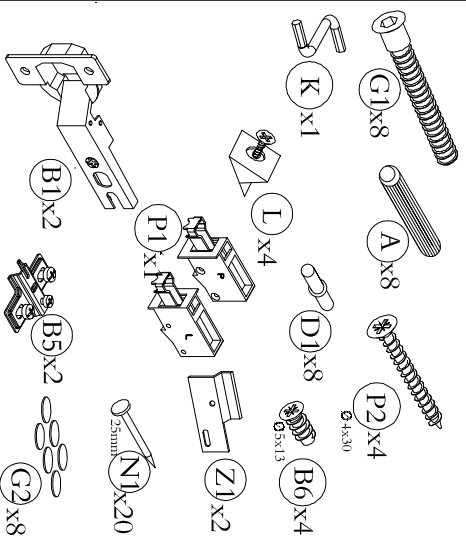


CAMPARI W3-W6 L/P

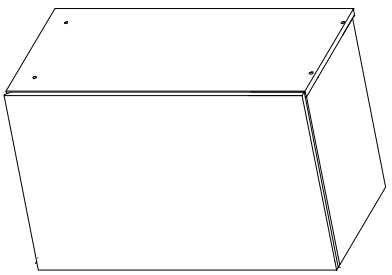


1.

W3- W6 L

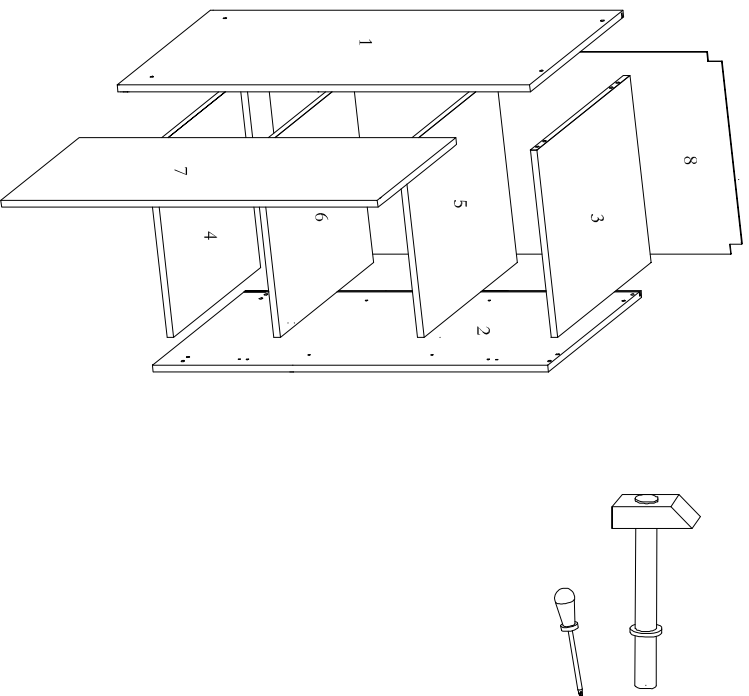



1/4

2.

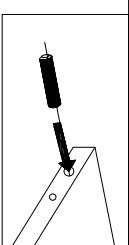


W3- W6 P



3.

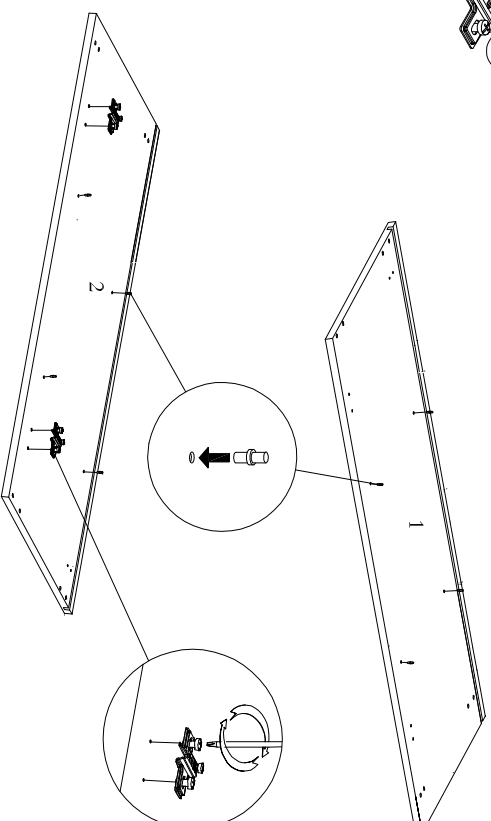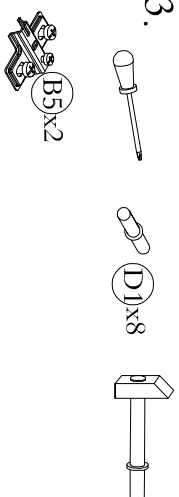

4.


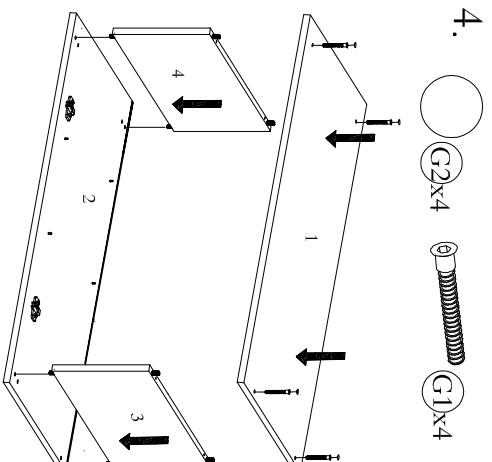


5.



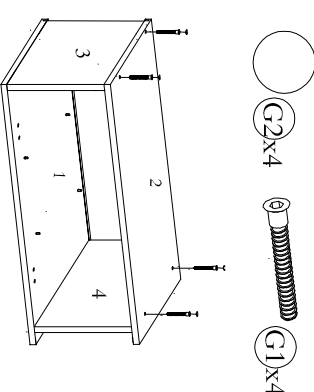


2/4




6.

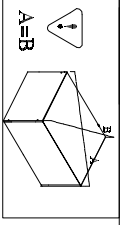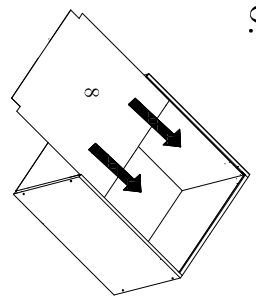

7.1

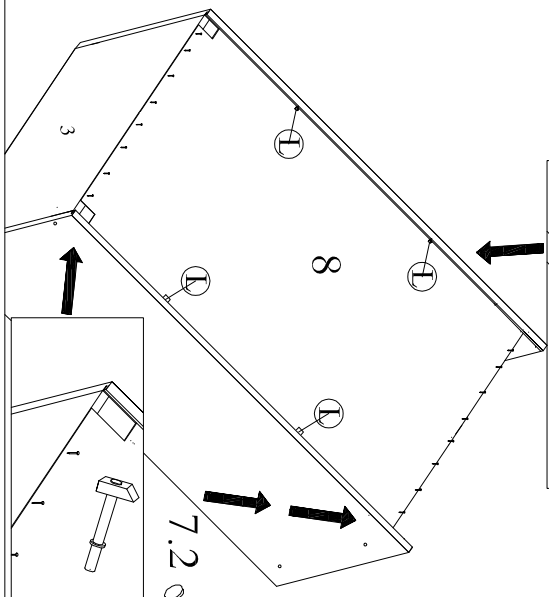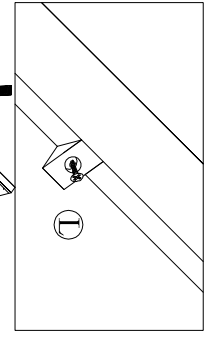



7.






W3-W6 P

W3-W6 L



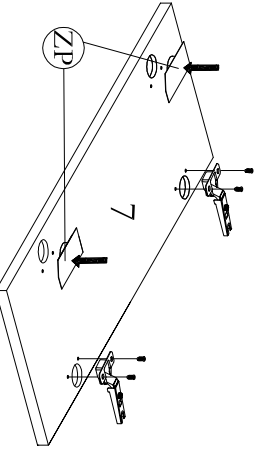
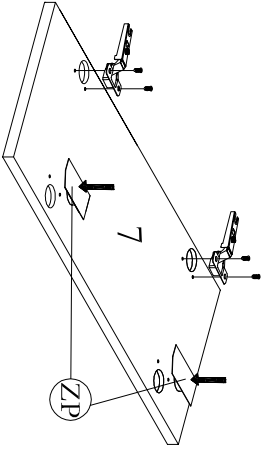


3/4


8.

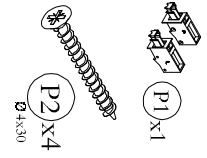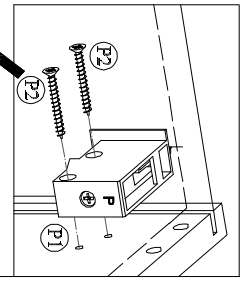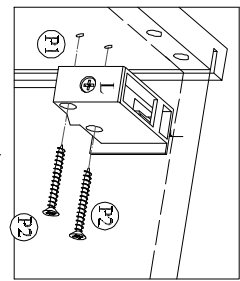


10.

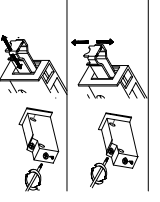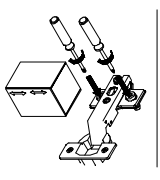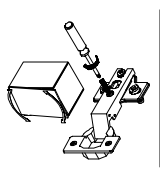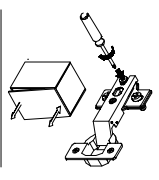

9.

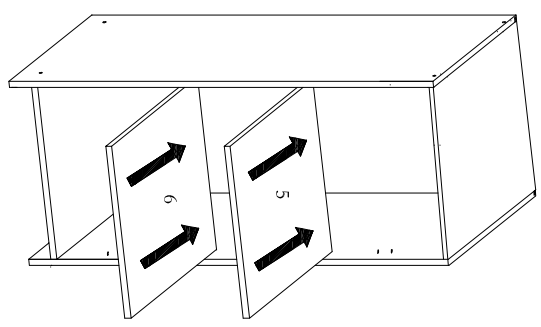

W3-W6 P

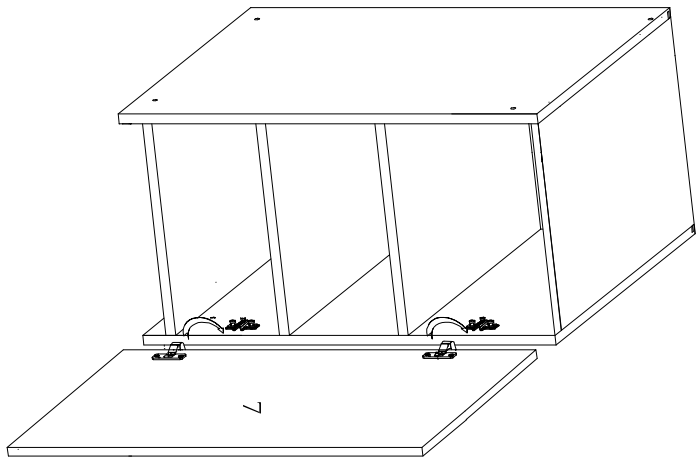

4/4