

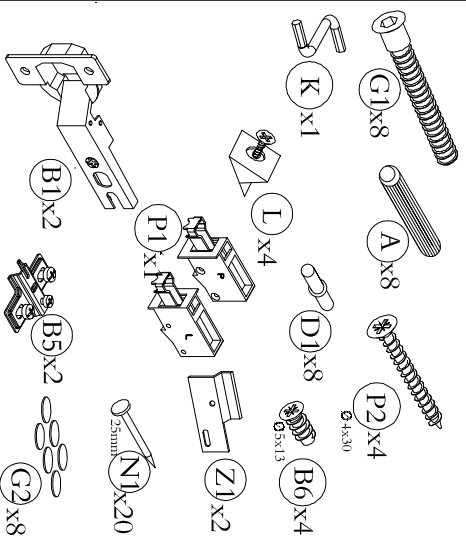


CAMPARI W3-W6 L/P

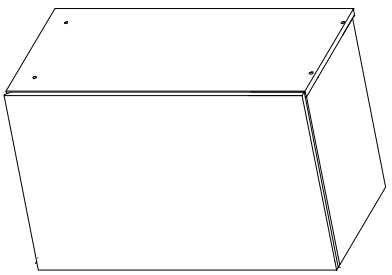



1.

W3- W6 L

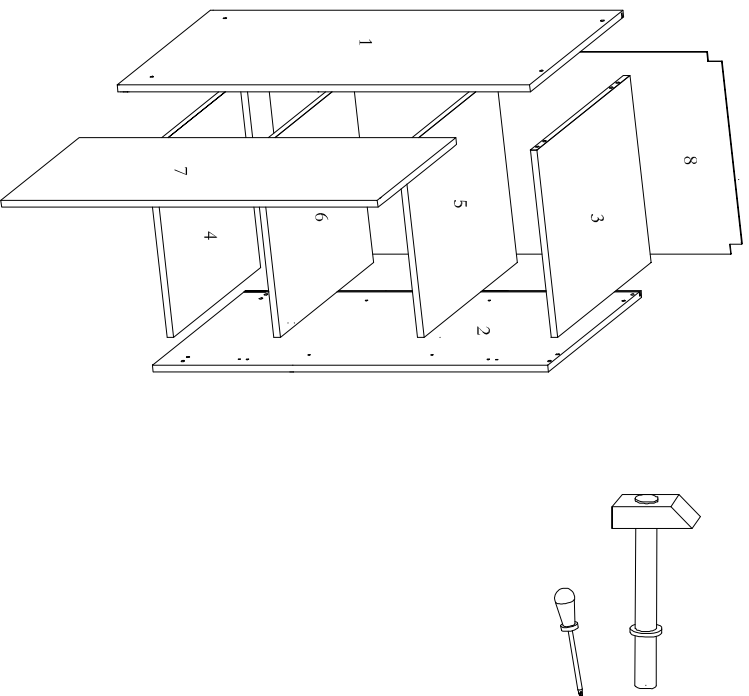


1/4



2.

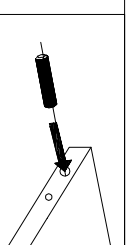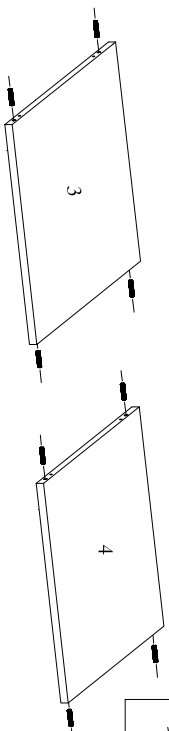


3.





W3- W6 P

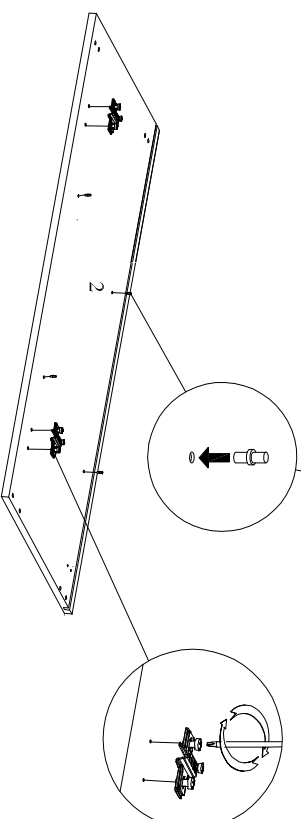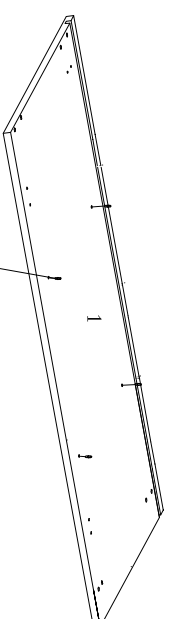

4.


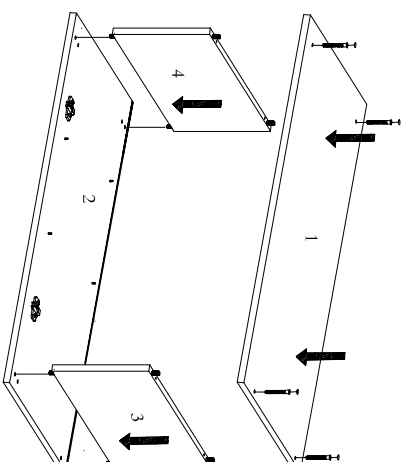


5.



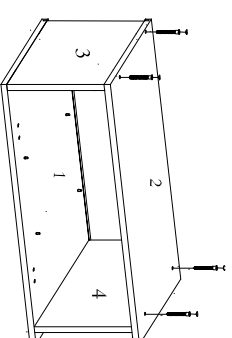


2/4



6.

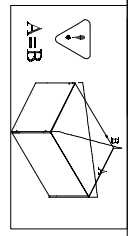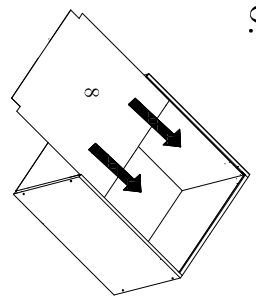

7.1

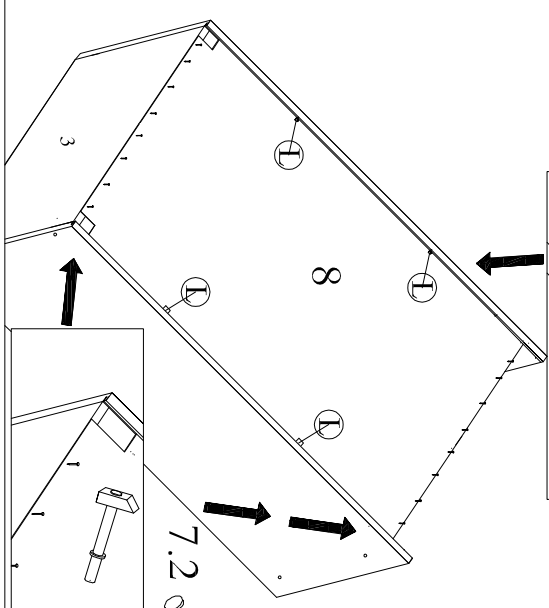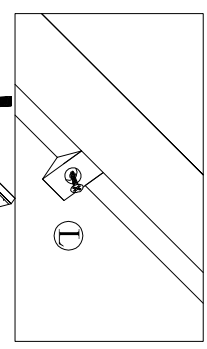



7.






W3-W6 P

W3-W6 L

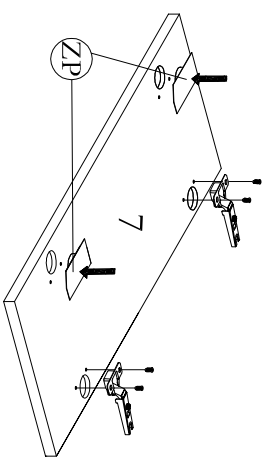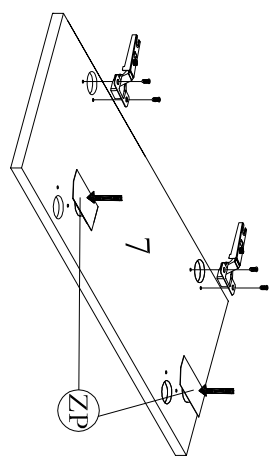


3/4


8.

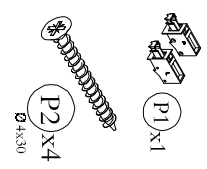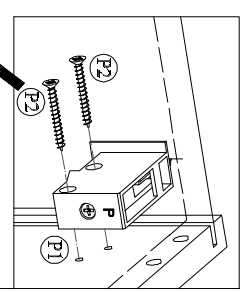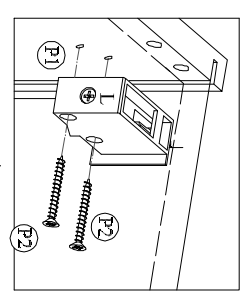





P2 x4
Ø 4x30

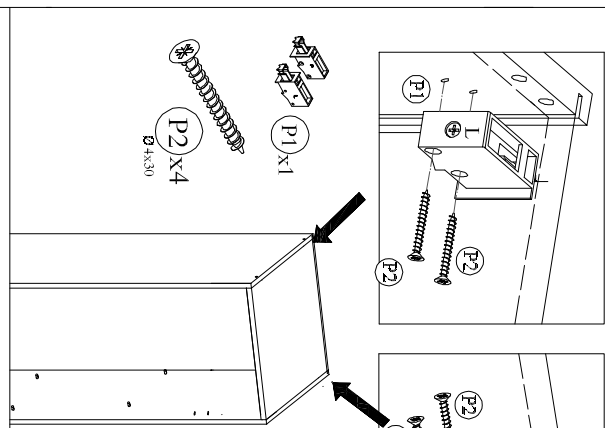


9.

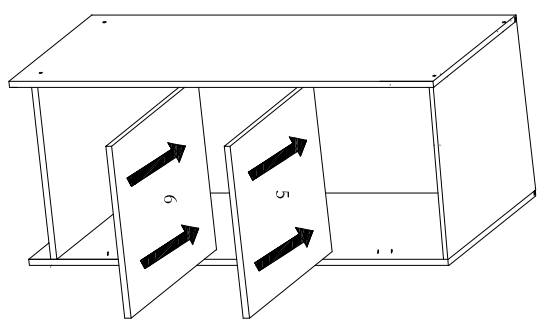

10.

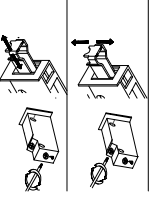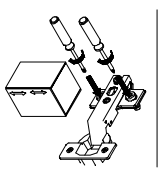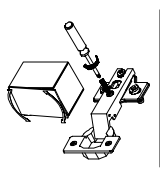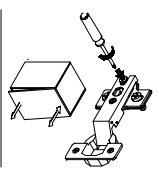

W3-W6 P

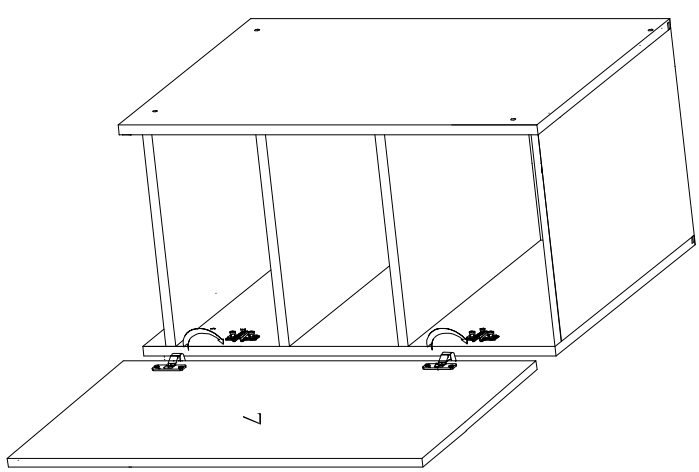

4/4