

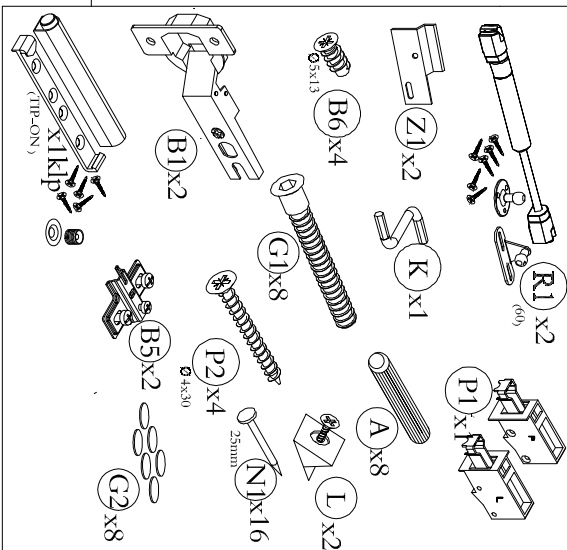
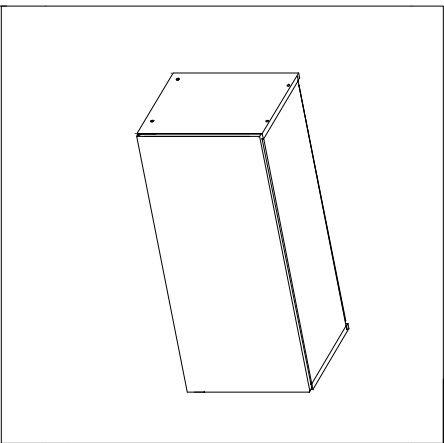

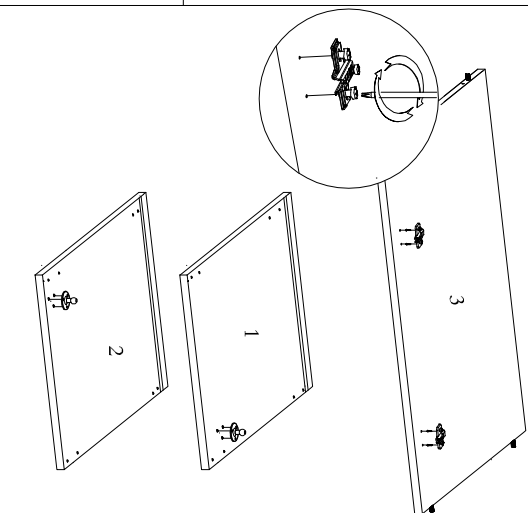
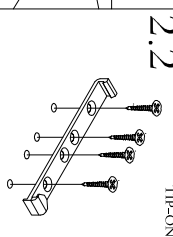
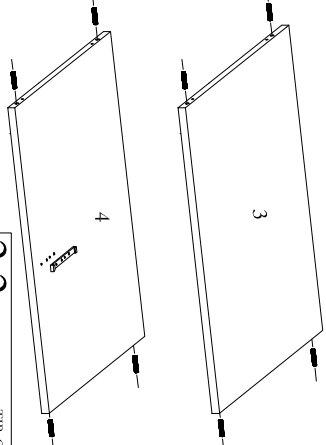



CAMPARI WO 4-9/36



1.

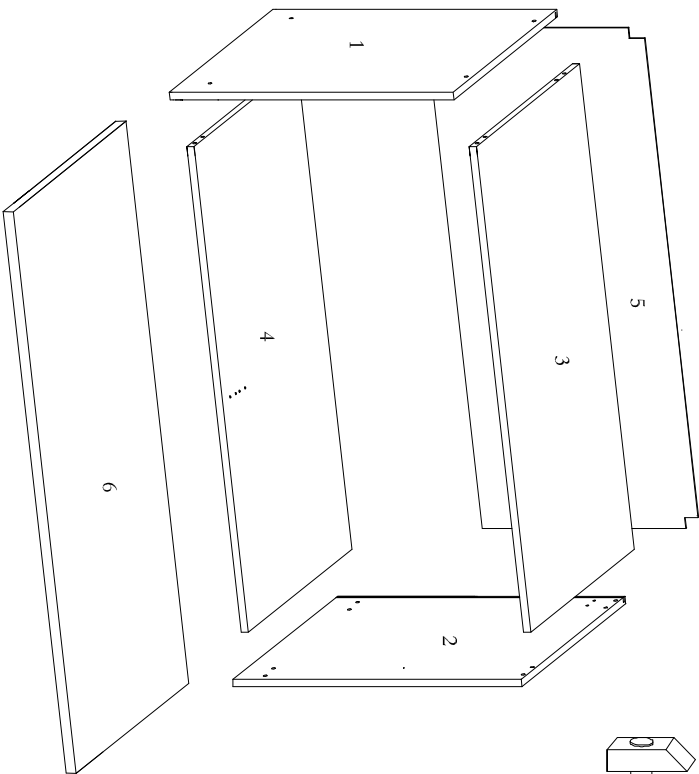




2.1

2.2






2.3 TRP-ON

2.4 TRP-ON



click!

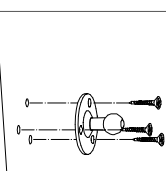





4.1

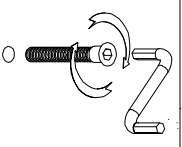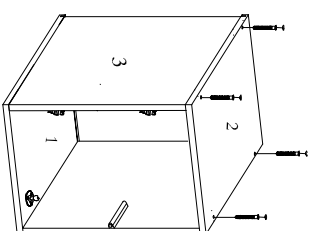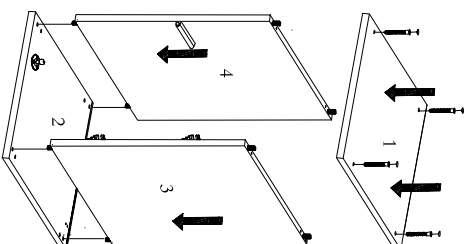





5.

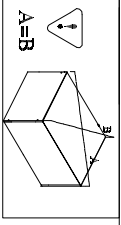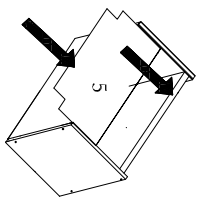








5.1

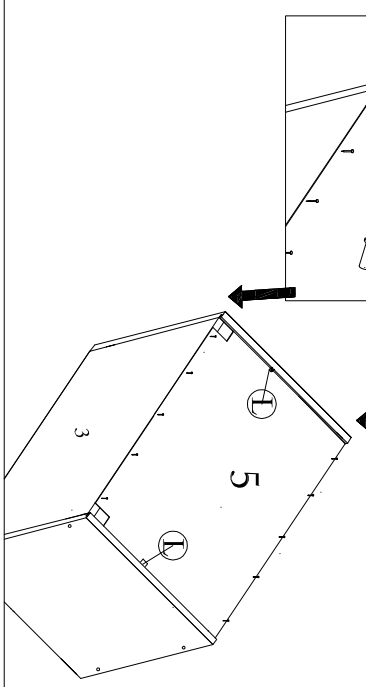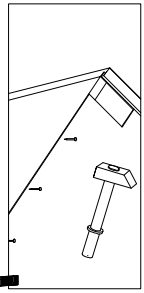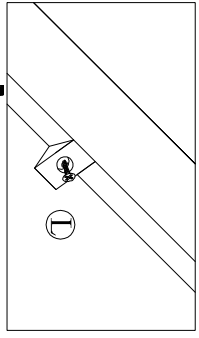

6.

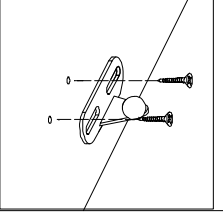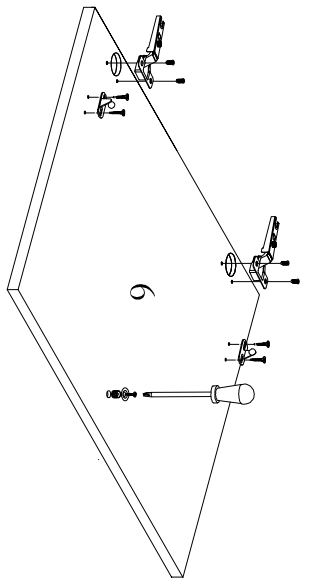

7.

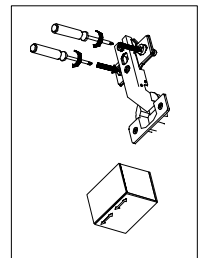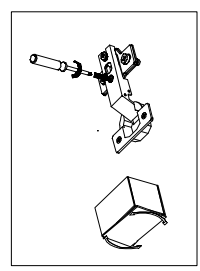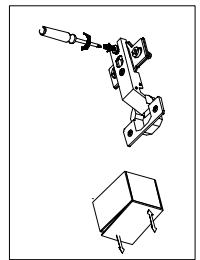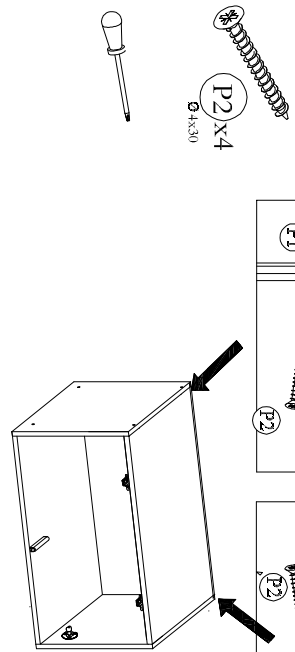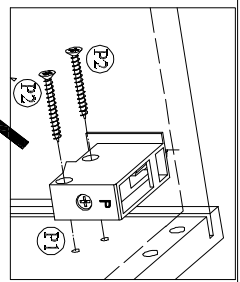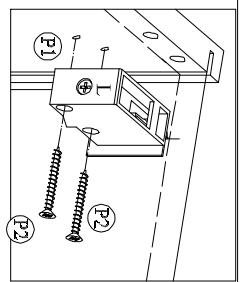

8.

