

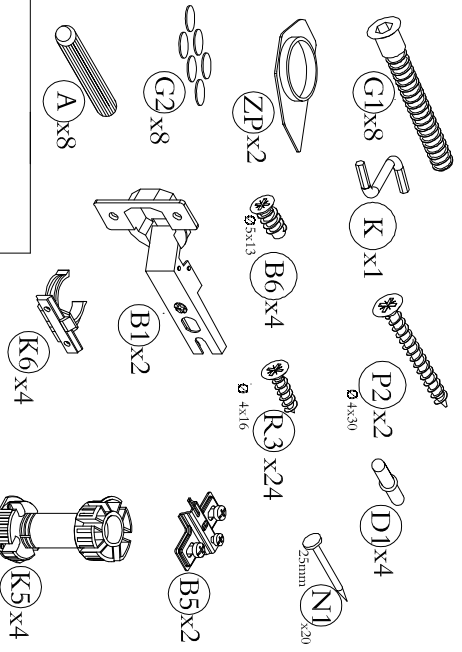
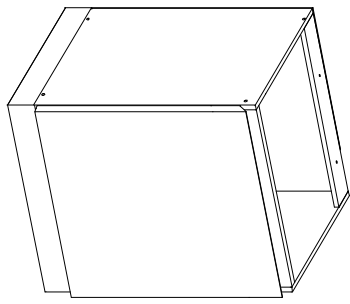




# CAMPARI


## D3-ID6

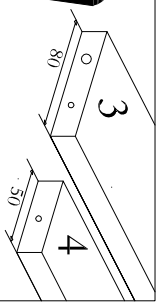


1.

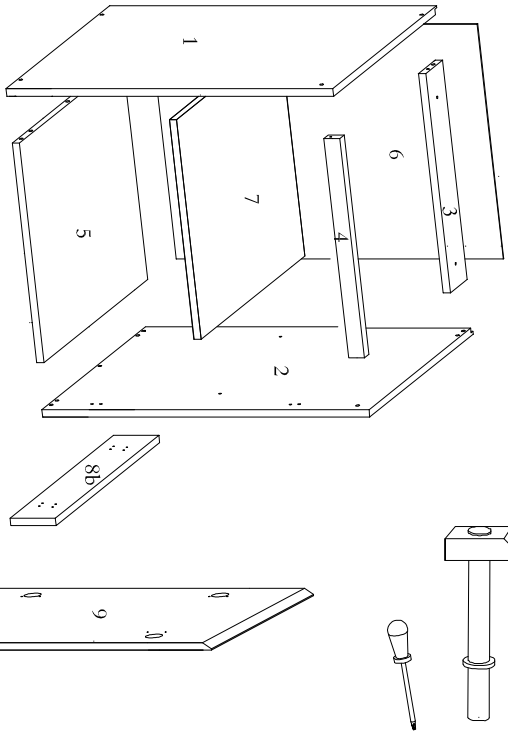

1/4

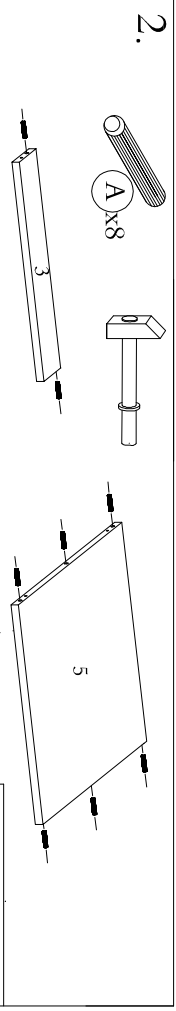




2.

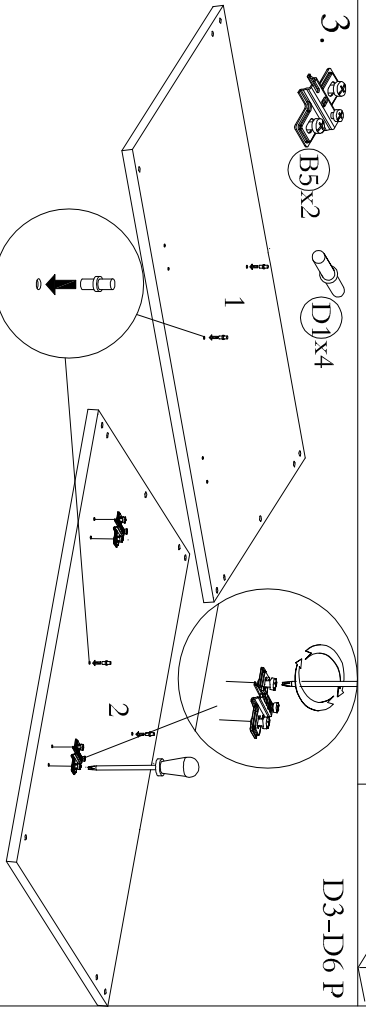



3.









4.

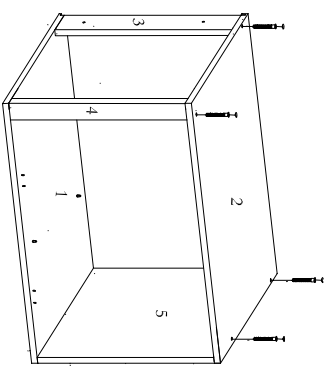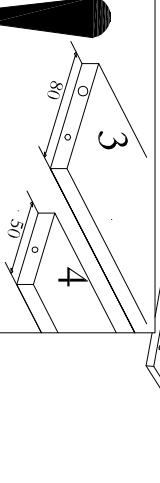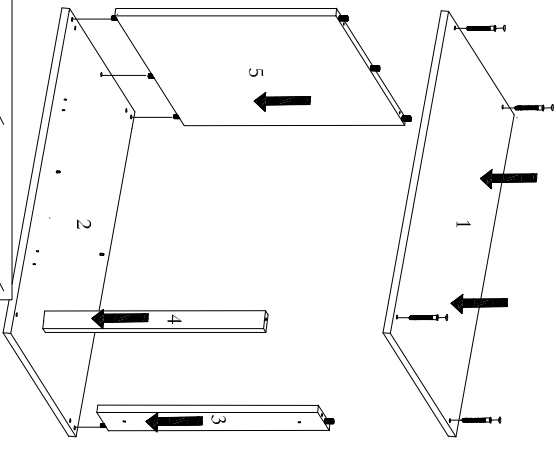

5.



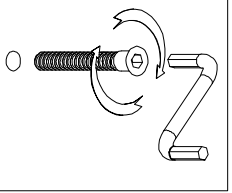



2/4

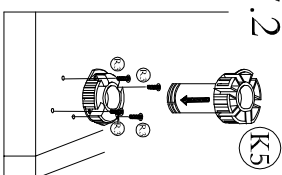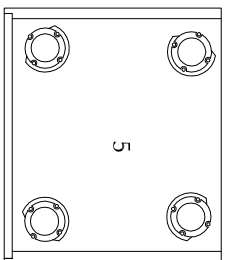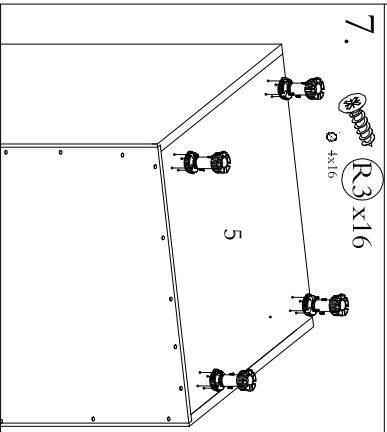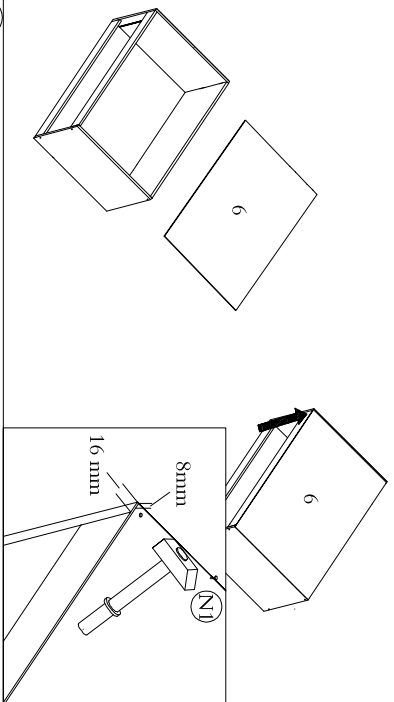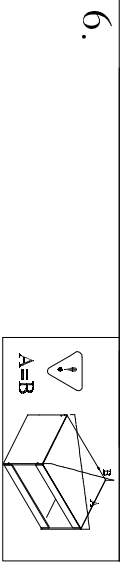


D3-D6L

D3-D6P

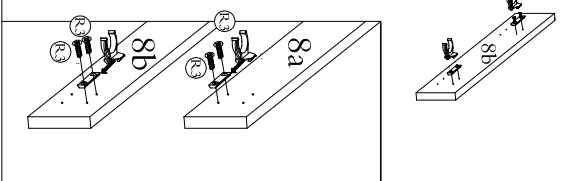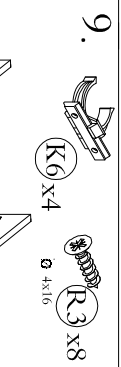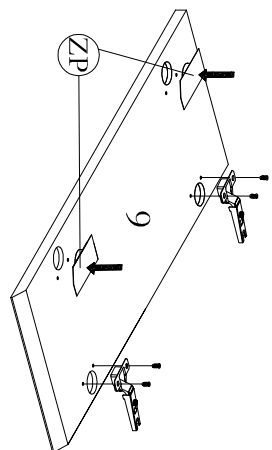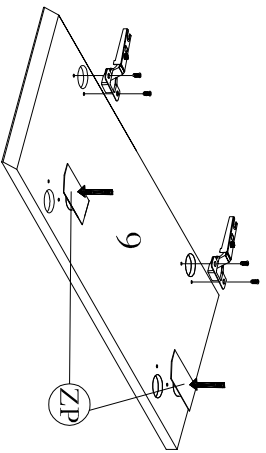

10.1

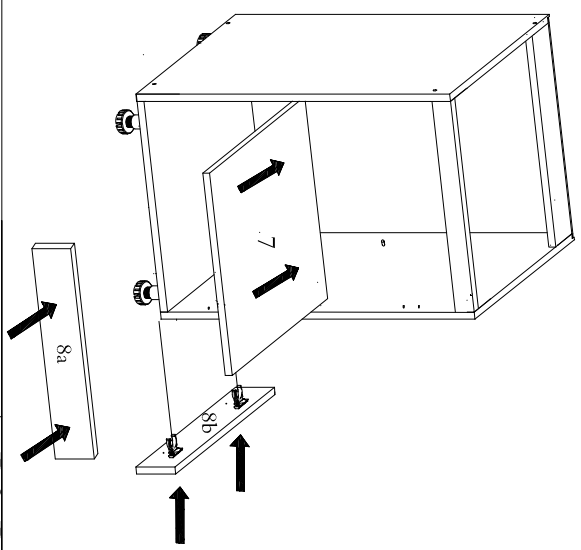

11.

