

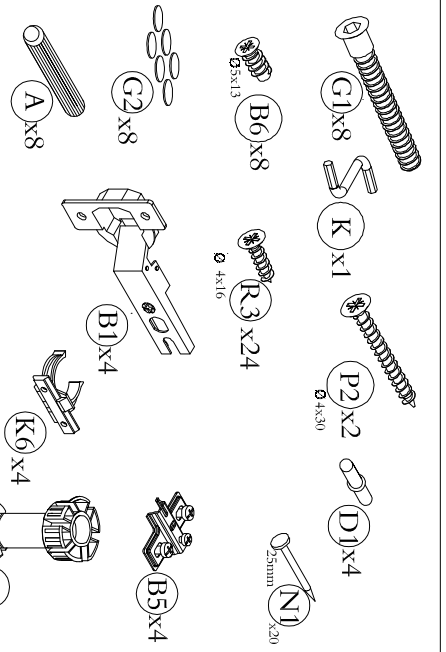
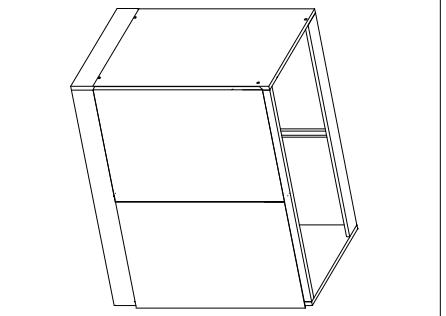
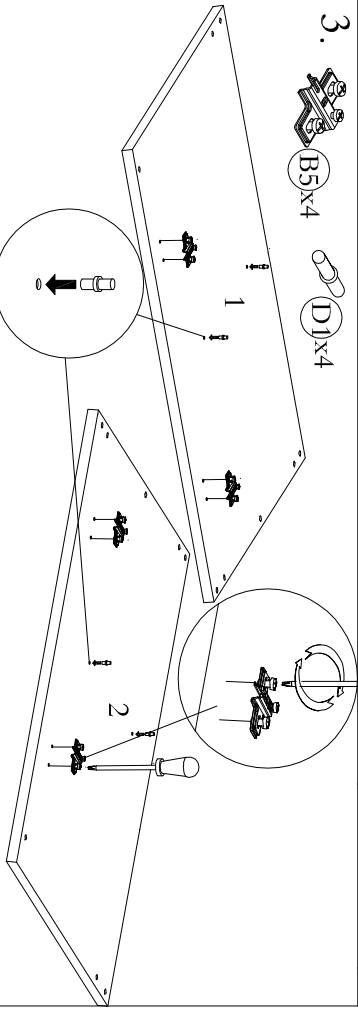

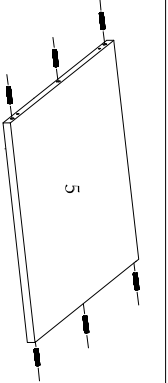



CAMPARI D8-D9

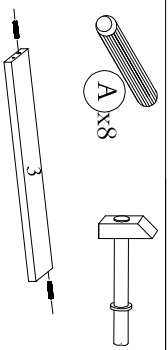


1.

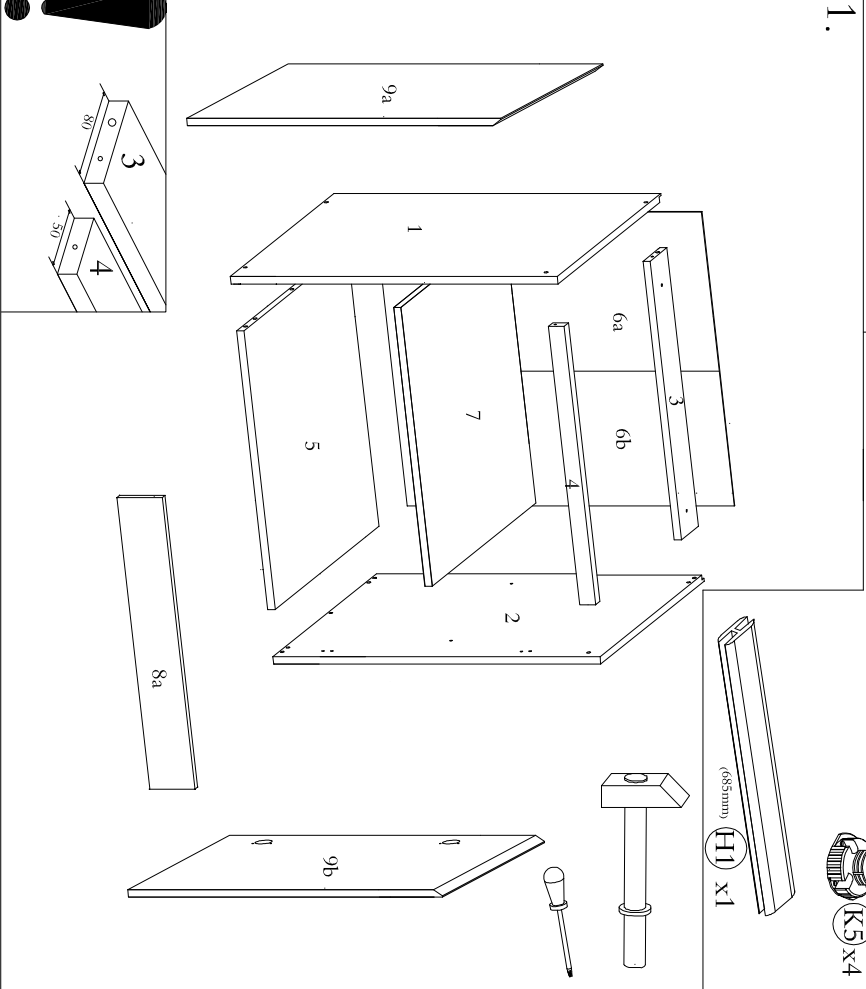


3.





4.


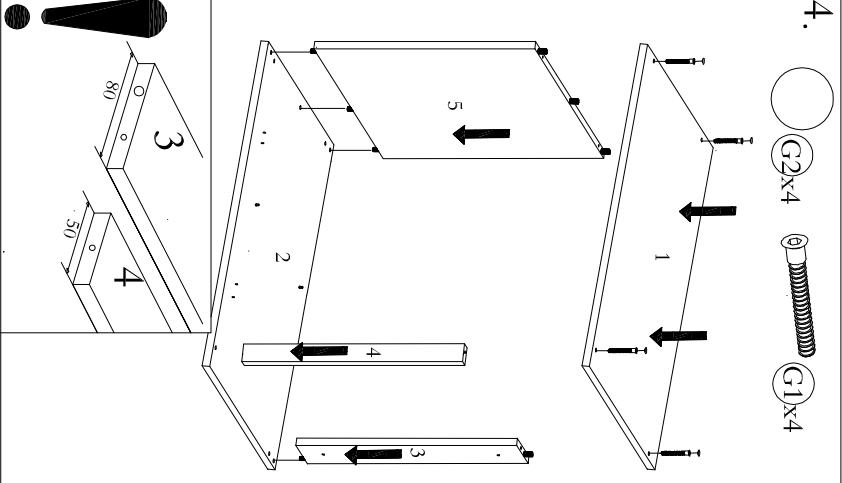


5.

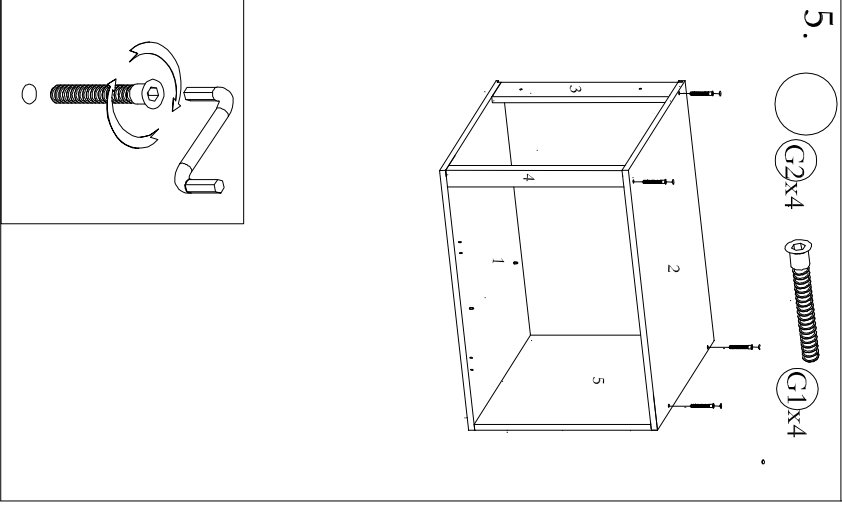


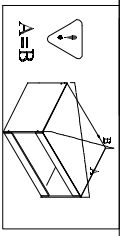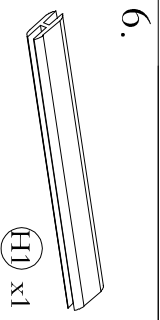


6.1

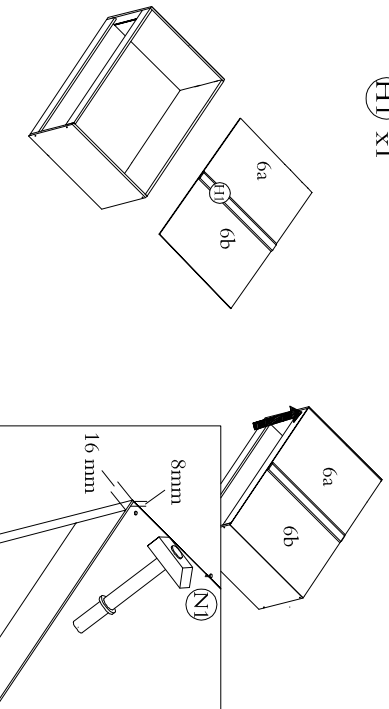


7. R3 x16
∅ 4x16

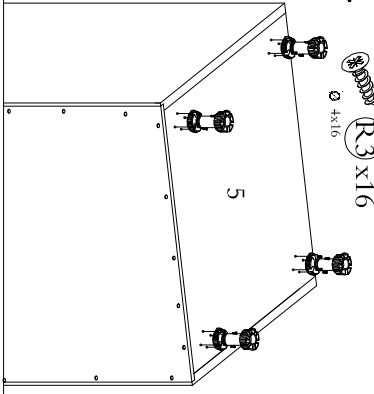


7.1

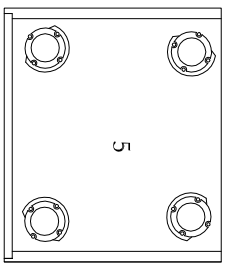


7.2

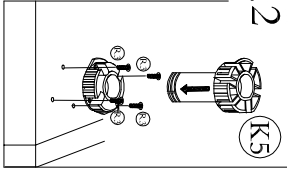

8.

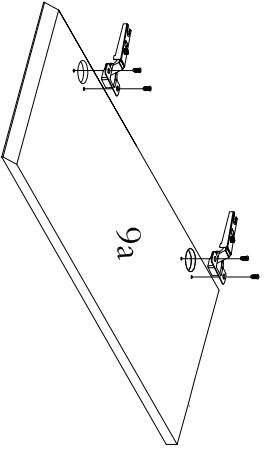



9a

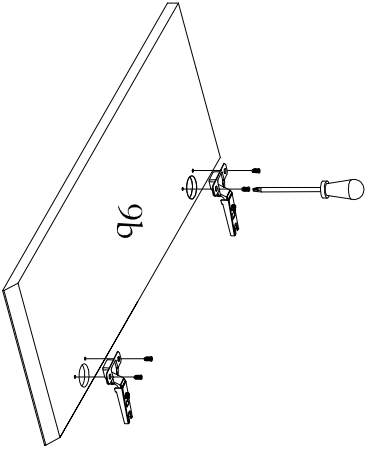


9b

3/4



9.

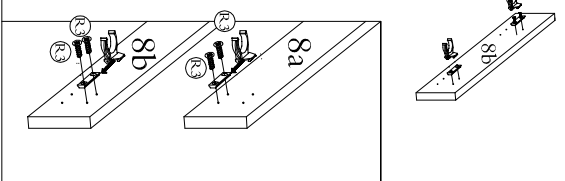

10.1

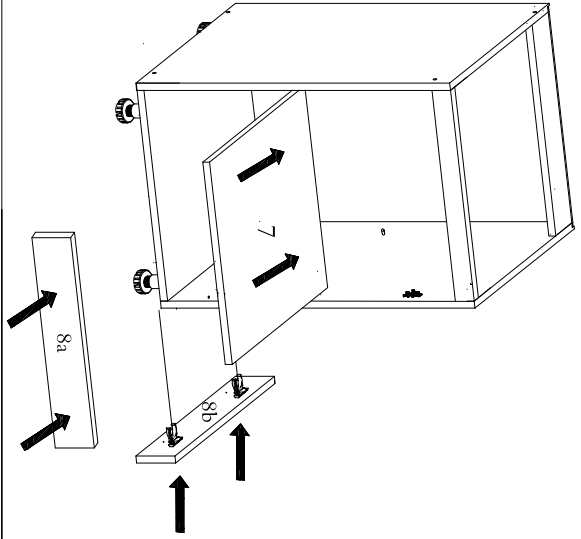

11.

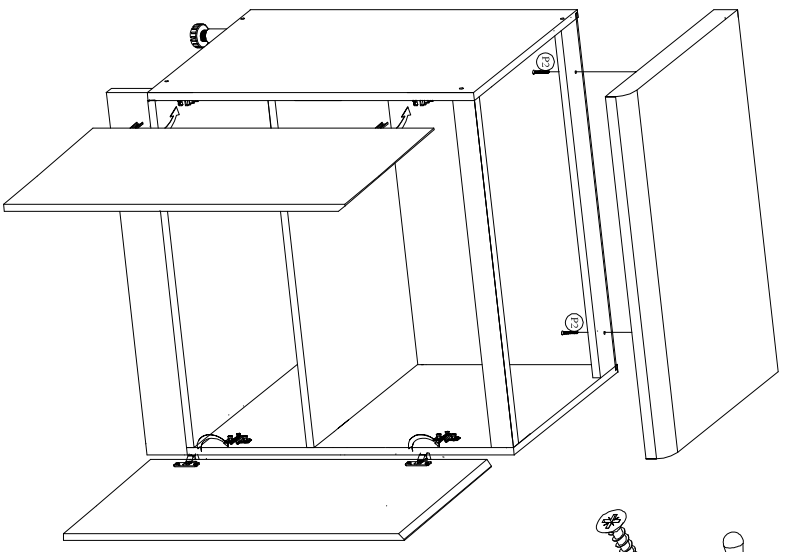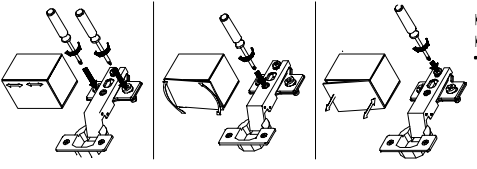

4/4