


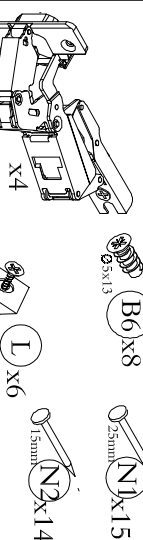







CAMPARI WNPP 6

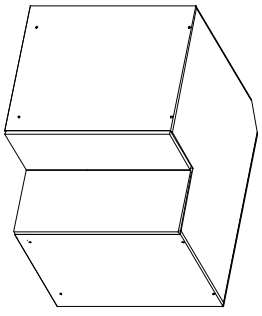






1.

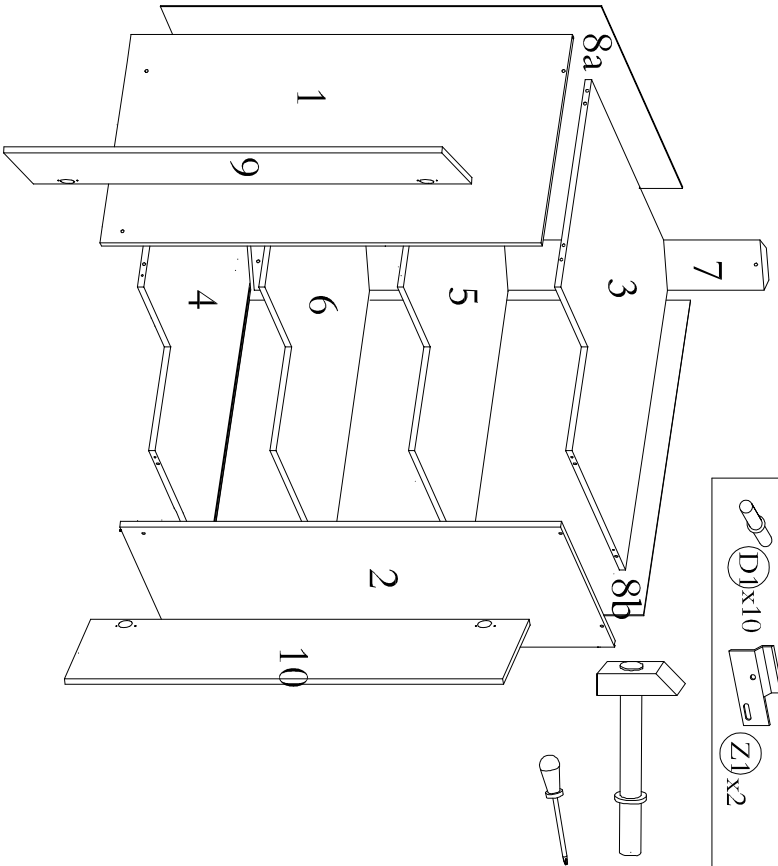



2.

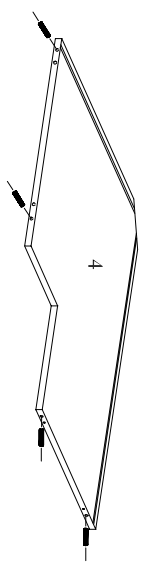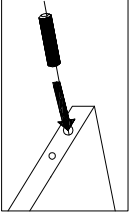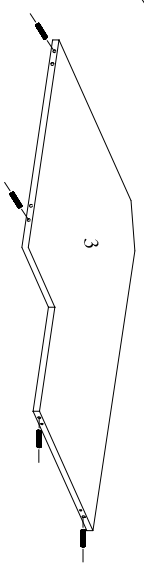


3.

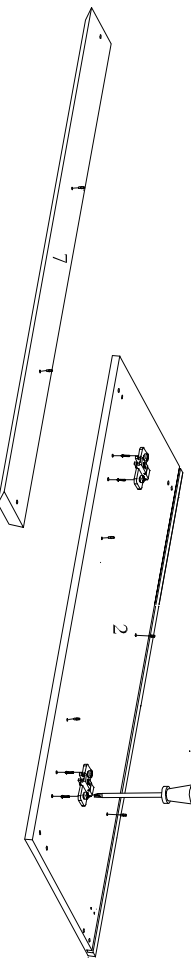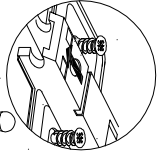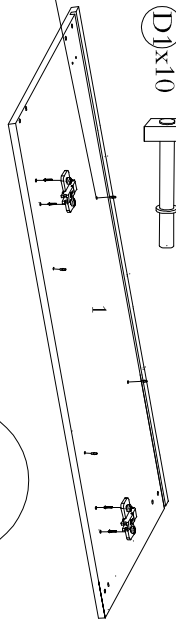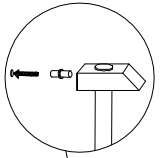




4.

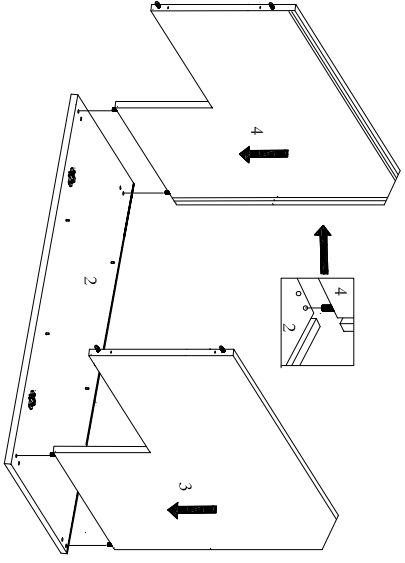




5.1

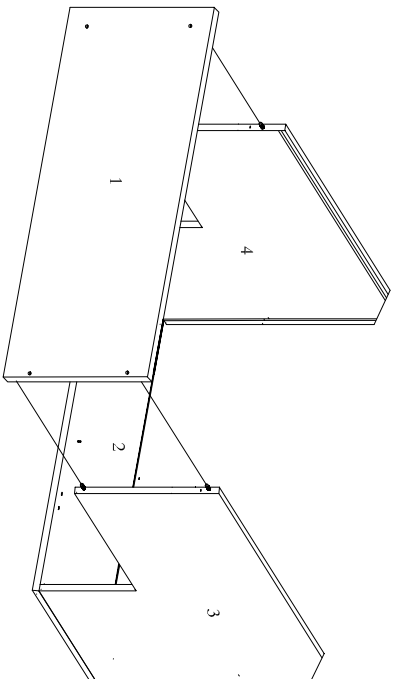


5.2

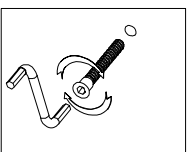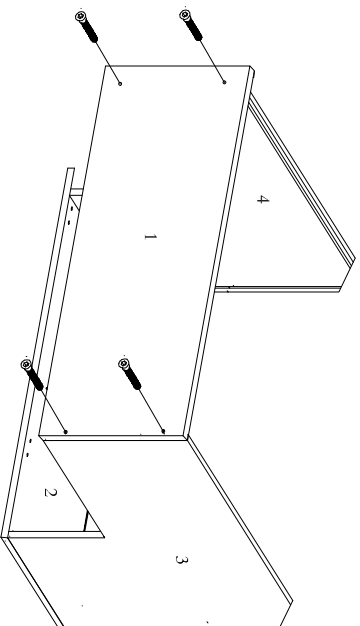



5.3

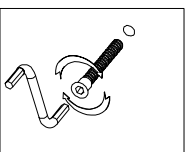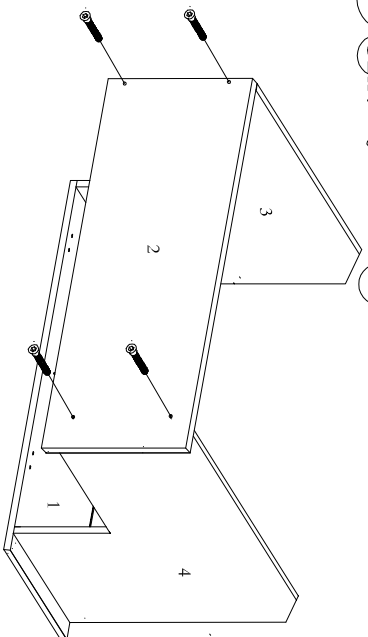



5.4

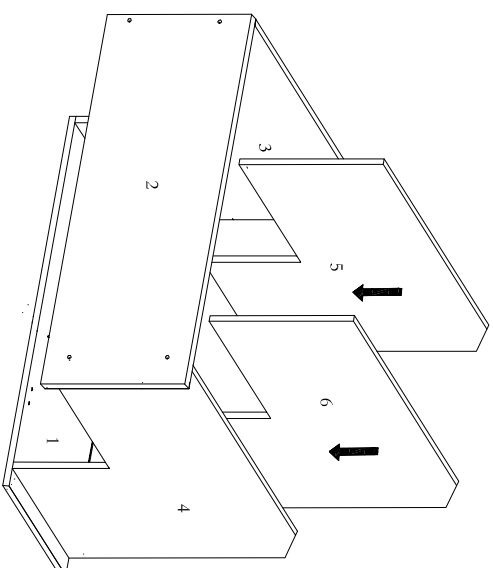




5.5

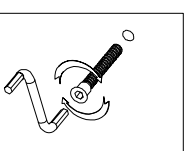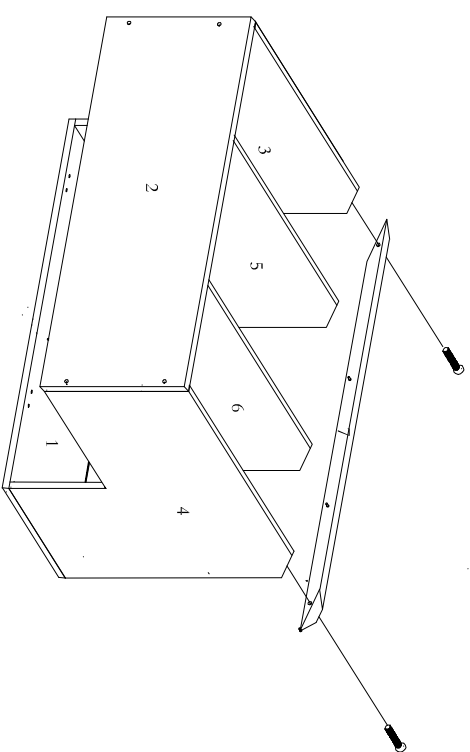

6. L x6 N1 x15

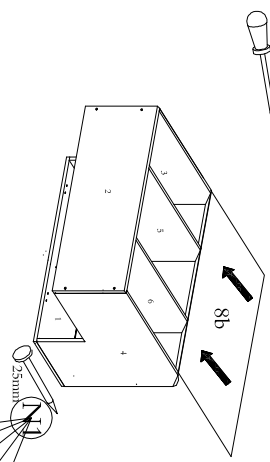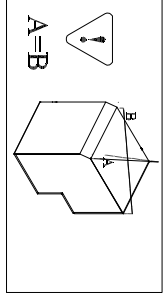


6.1

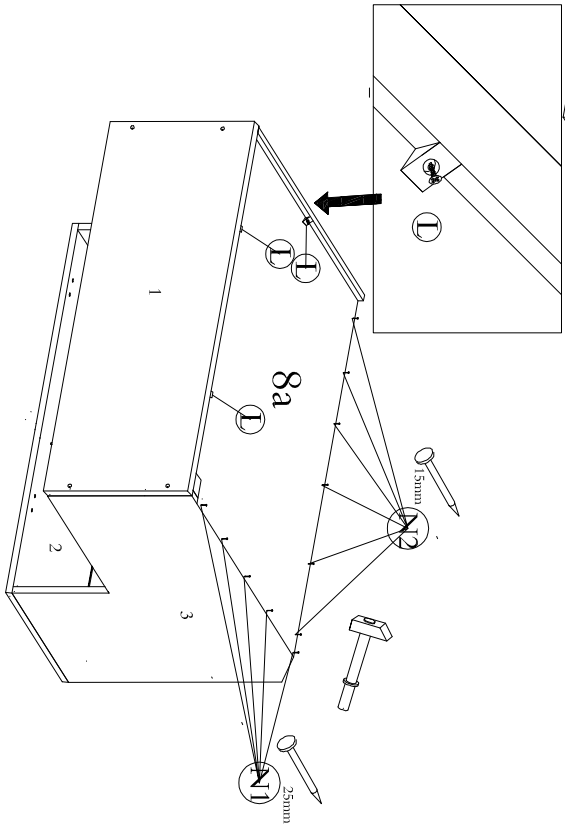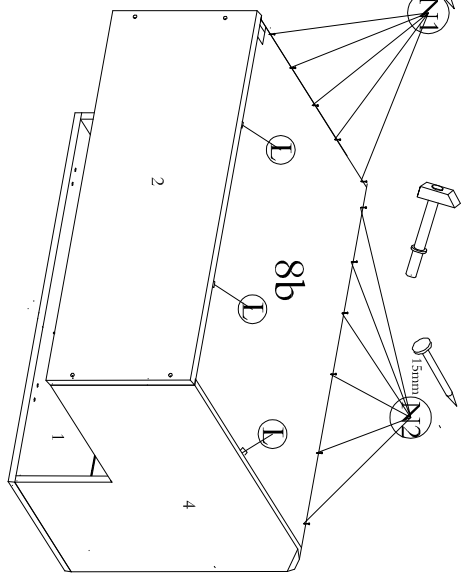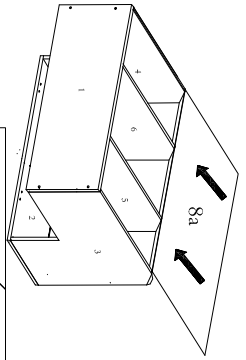

5/7



7.





B3x4

Ø5x13

B6x8

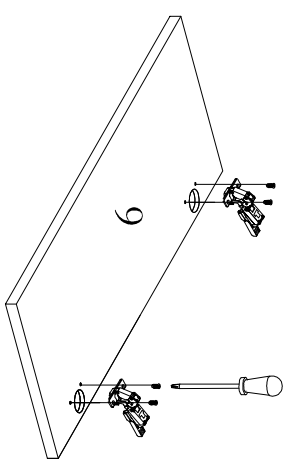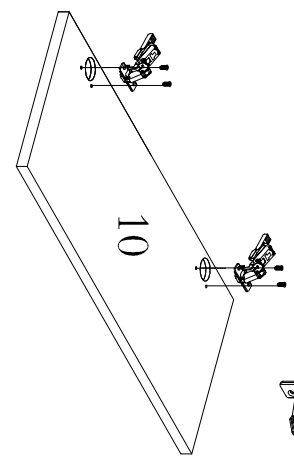


8.

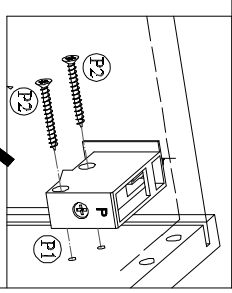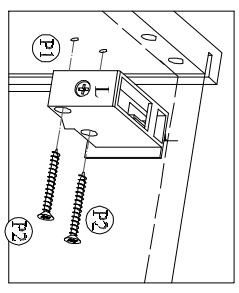

P2 x4
Ø4x30

P1 x1

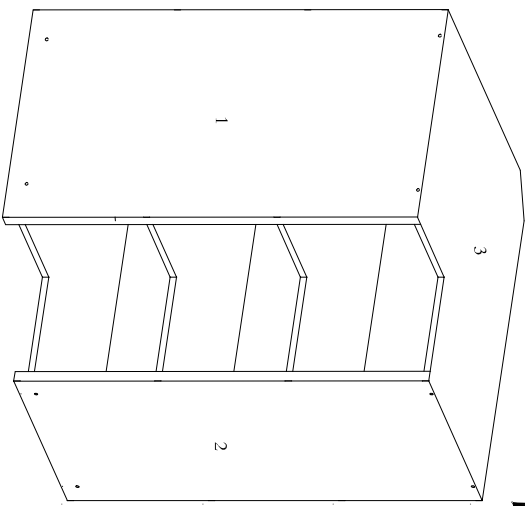

6/7

9.

