


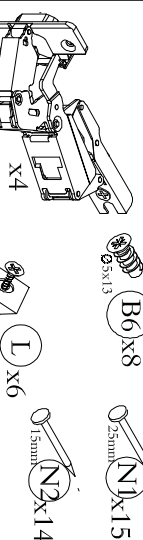

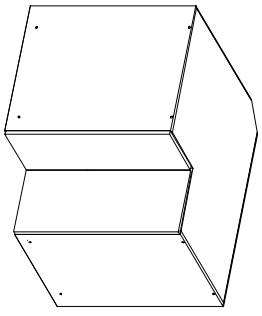
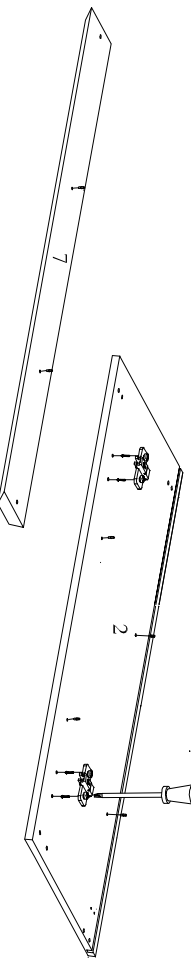
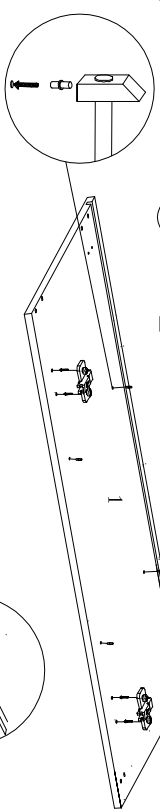

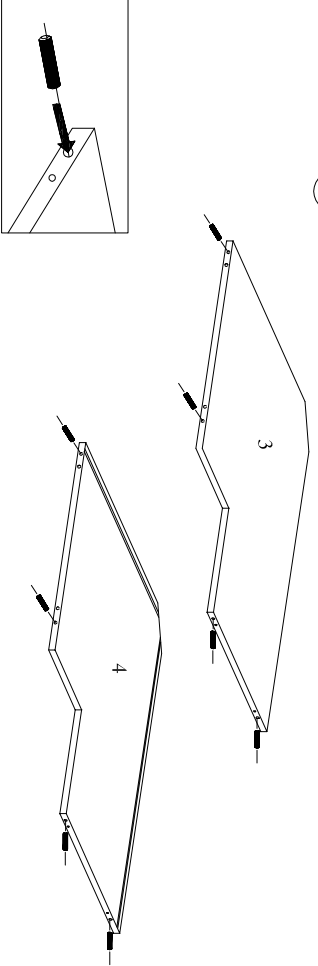



CAMPARI WNPP 6




1.

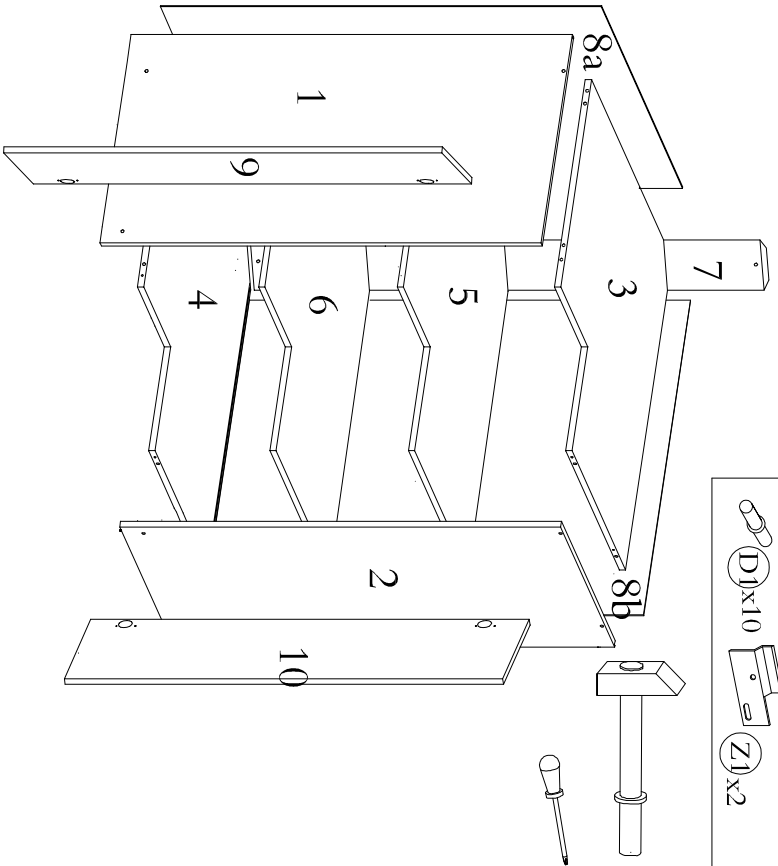




4.

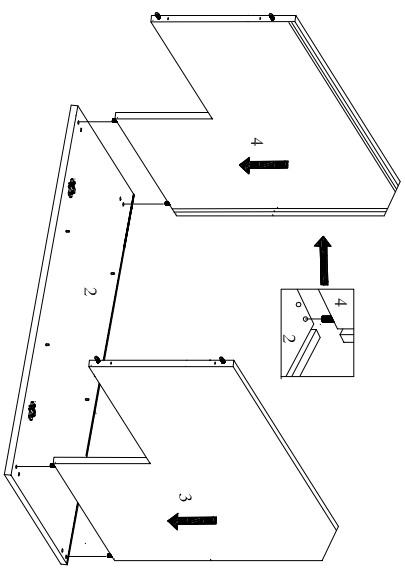


5.1

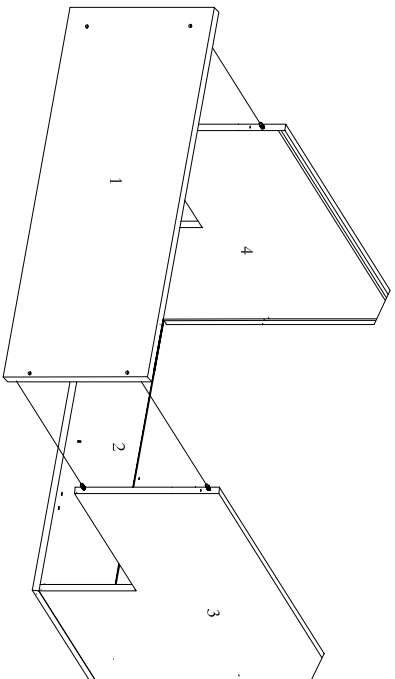



5.2

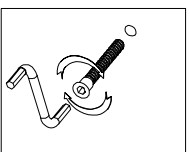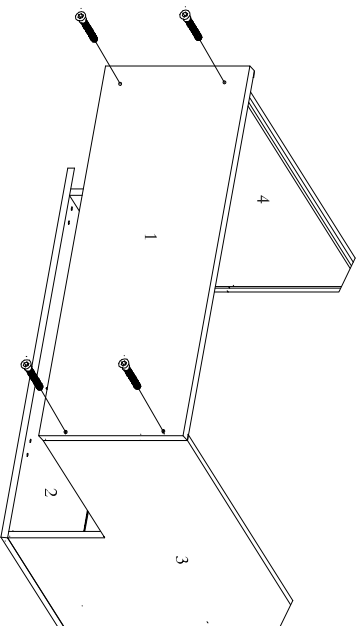




5.4

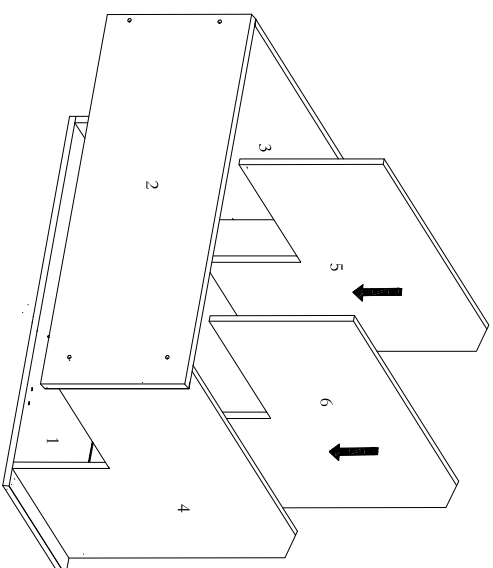






5.5

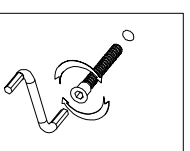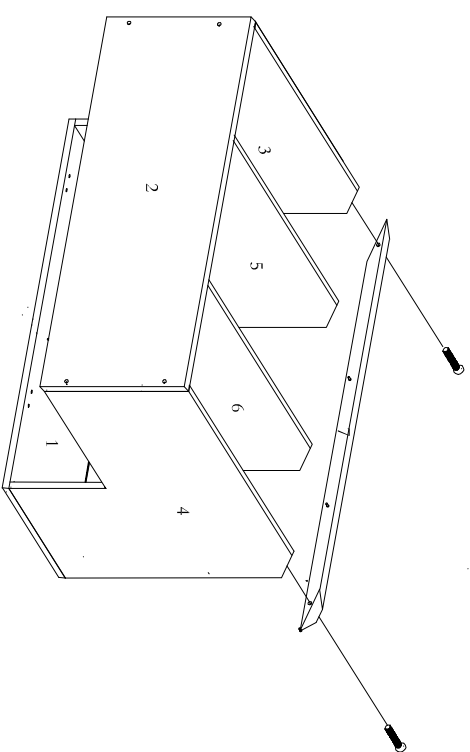

5.3

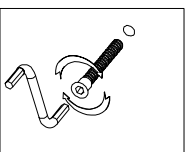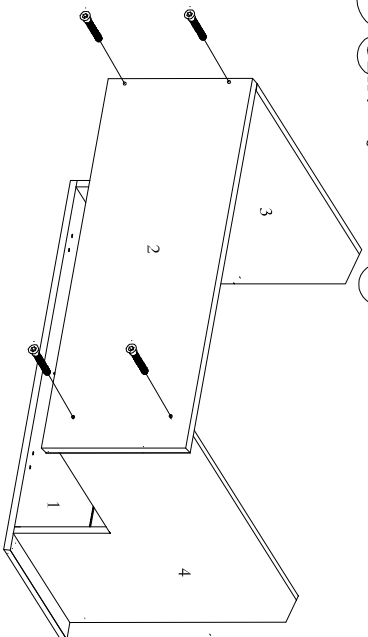


- 6. L x6 N1 x15 Hammer

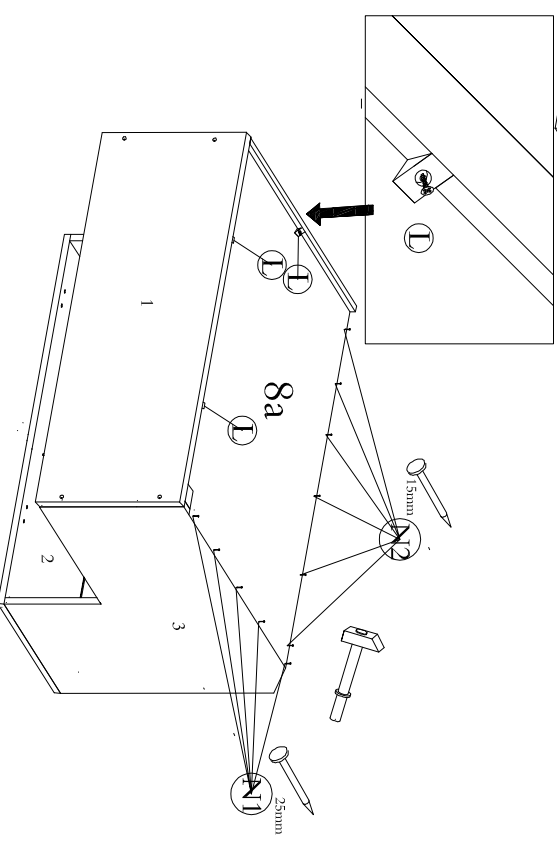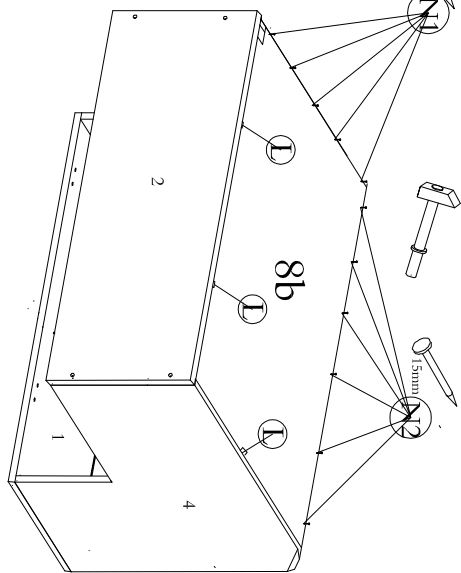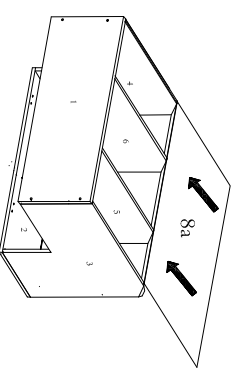
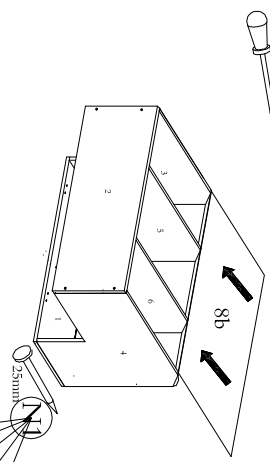
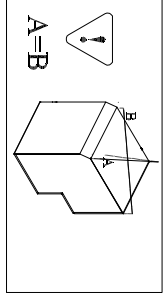


6.1

- 7. Screwdriver B3 x4 B6 x8

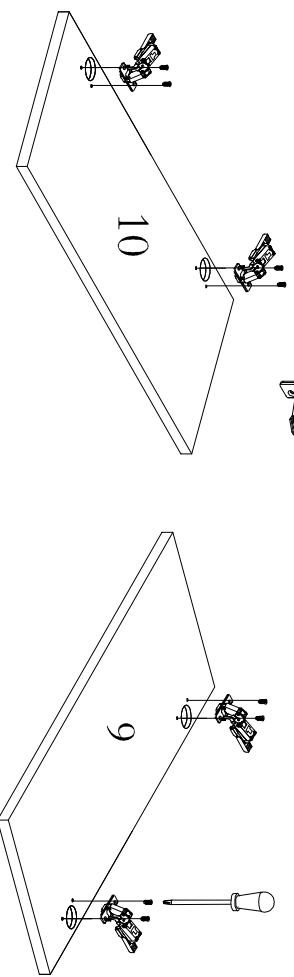

8.

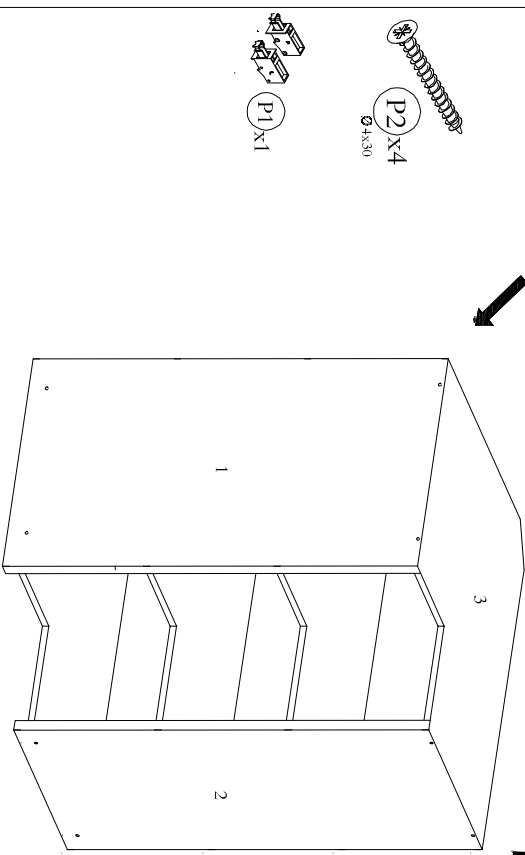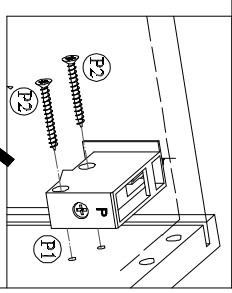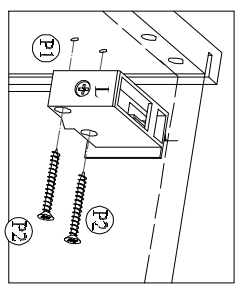

9.

